

| HOT AND COLD LAMINATOR     |  |
|----------------------------|--|
| Maximum laminating width   | 13 inches  |
| Lamination pouch thickness | 80 and 100 mic   |
| Laminating speed           | 10 inches per minute   |
| Warm-up                    | 3-5 minutes  |
| Indicator                  | LED POWER (red)<br>LED READY (green)   |
| Special features           | ABS switch (for clearing jams)<br>No blistering<br>Automatic shutdown or overheating   |
| TRIMMER                    |  |
| Special features           | Reel trimmers with 3 selectable types of cut and setting lock<br>Visual positioning aids in cm (lines, angles, scale)  |
| Selectable types of cut    | Straight cut<br>Wave cut<br>Perforation cut  |
| Maximum size               | A3   |
| Maximum cutting capacity   | Straight cut: 3 sheets of paper, (80 g/m <sup>2</sup> )<br>Wave cut: 3 sheets of paper, (80 g/m <sup>2</sup> )<br>Perforation: 3 sheets of paper, (80 g/m <sup>2</sup> ) |
| Dimensions                 | 16.6X6.3X3.9 inches  |
| Weight                     | 3.30 pounds  |
| Power supply               | 120 V, 60 Hz   |
| Rated input power          | Max. 365 W, 3,04A  |




## LT13 6-in-1 Thermal Laminator & Rotary Trimmer



## OPERATING ELEMENTS

1. Cutting head
2. Guide rail
3. Pressing rail with finger protection
4. Function switch (temperature control)
5. Indicator elements (LEDs)
6. Laminator infeed
7. Visual positioning aids in cm (lines, angles, scale)
8. ON/OFF switch
9. Anti-blocking slider ( for clearing jams)
10. Corner rounder

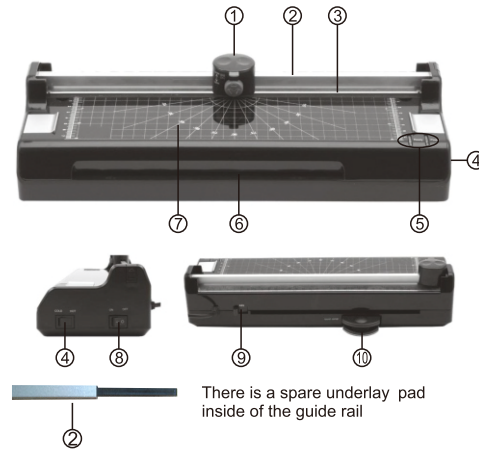

## OPERATION Laminator

The laminator can perform hot and cold lamination:

For hot lamination, the lamination pouch is adhered together.

For cold lamination, the lamination pouch is pressed together.

Select the lamination method according to the material to be laminated.

Note: Only cold lamination should be used for thermopaper and ultrasonic images!

### 1. Hot laminating

- 1.1 Connect the power cable to an easily accessible, standard electrical socket.

Caution: Check that the voltage specifications of the unit correspond to that of your power supply network (120 V, 60 Hz).

- 1.2 Use the on/off switch on the right of the appliance to switch on:
- 1.3 The drive motor for the transport rollers starts up. The correct operating temperature is reached after about 3-5 minutes and the green display lamp shows.
- 1.4 Insert the document to be laminated in the pouch so that there is a margin of at least .1 inches to the edge of the pouch on all sides.  
Caution: Only use pouch intended for hot laminating.
- 1.5 Insert the pouch containing the document in the laminator's insertion slot. Insert the ready closed side of the pouch first.  
Note: To prevent the laminating pouch from creasing, never insert the open end of the pouch pocket in the insertion slot of the laminator first. When inserting the pouch, observe the instructions on the insertion slot.  
The laminating process occurs automatically.  
Caution: The lamination pouches is very hot and soft when ejected following lamination. Therefore, handle the laminated document with care!  
Note: To flatten and smoothen the laminated product, place a book or similar heavy, flat object on it.
- 1.6 When you have completed the laminating process, turn the function switch to the right in COLD position and remove the power plug from the power socket. Let the device cool down before packing it away.  
Caution: The device is very hot directly after laminating!

### 2. Cold laminating

Attention: If you have just finished using the laminator for hot laminating, you must let the laminator cool down. It takes about 30 minutes to cool down sufficiently.

- 2.1 Turn the function switch to the right in the COLD position.  
Note: Only use cold lamination pouch for cold laminating.
- 2.2 Remove the protective pouch from the lamination pouch.

- 2.3 Insert the document to be laminated in the lamination pouch so that there is a margin of approx. at least .1 inches to the edge of the pouch on all sides.
- 2.4 Guide the laminating pouch containing the document to be laminated in the laminator infeed with the closed side first. The laminating process occurs automatically.  
Note: To prevent the lamination pouch from creasing, never feed the open side of the lamination pouch first in the laminator infeed. When inserting the lamination pouch, observe the instructions on the infeed slot.

### 3. Clearing jammed lamination pouch

The device is equipped with an ABS switch (anti-blocking sliding switch) to clear pouch jams quickly. Proceed as follows if the lamination pouch jams:

- 3.1 Switch the device off: Set the On/Off switch to OFF.
- 3.2 Slide the ABS switch fully to the left.
- 3.3 Hold the laminator firmly and pull the lamination pouch together with the document to be laminated out of the laminator's infeed.
- 3.4 Slide the ABS switch fully to the right.
- 3.5 Clean the transport rollers of any deposits and residual adhesive by inserting a folded piece of paper in the laminator infeed, refer to Chapter "Cleaning the transport rollers".  
Note: If foil jams occur repeatedly or jammed foil cannot be removed from the laminator, please contact us.

## TRIMMER

The trimmer can be used to cut paper, card, photo paper and lamination pouches.

### 1. Selecting the type of cut

The trimmer is equipped to complete three types of cut:

- straight cut,
- wave cut,
- perforation cut.

Note: The blades are accommodated in a protective housing.

Select the type of cut you require, see Fig.1:

- 1.1 Pull the setting lock on the cutting head upwards to the OPEN position.
- 1.2 Turn the rotating knob for the cut until the symbol related to the required cut is at the top.
- 1.3 Press the setting lock on the cutting head downwards to the LOCK position.

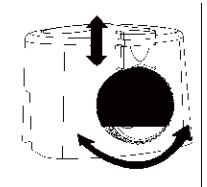


Fig. 1  
(similar to figure)

### 2. Cutting material

- 2.1 Place the device on a stable, level surface with the cutting head facing up.
- 2.2 Slide the cutting head to one side of the guide rail
- 2.3 Slide the material to be cut under the transparent pressing rail at the required position.
- 2.4 Hold the material to be cut firmly with one hand so that it cannot slip when cut. Otherwise, the cut may be inaccurate.
- 2.5 To complete the cut, press the cutting head down and slide it along the guide rail to the other side, refer to Fig. 2.

Note: To ensure a clean cut, only run the head through once.

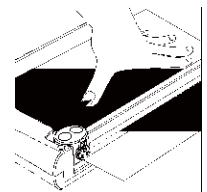


Fig. 2